





INSTALL INSTRUCTIONS

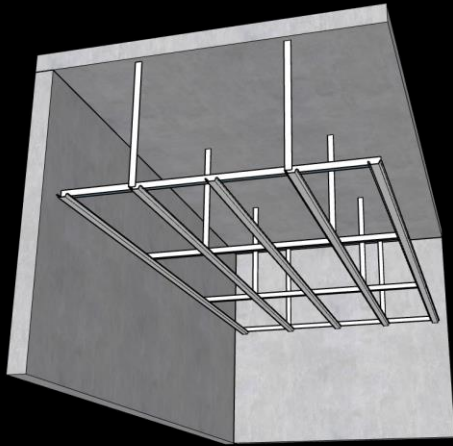


Step 1

Install metals (Uni-Strut/MF/etc.)
These must run in the same direction as the slats.

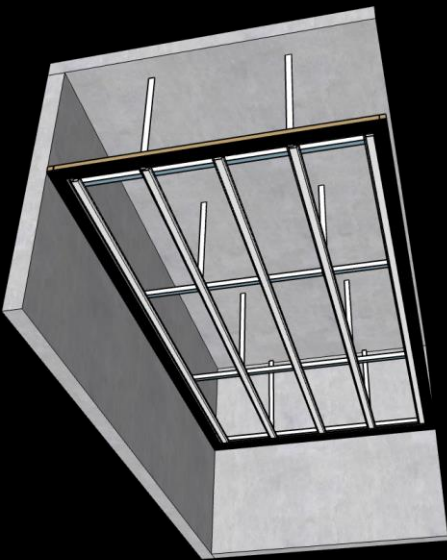


Step 2

Install black finished MDF to perimeter.
(This phase may be optional, depending on the specification).

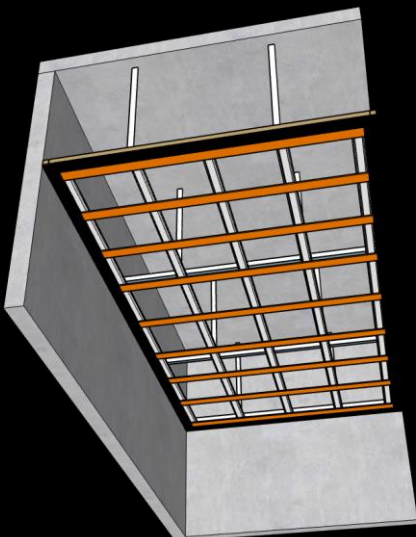

Step 3


Install primary carriers.
These must be installed to the set-out dimensions detailed in the drawings supplied by Decor Acoustics.

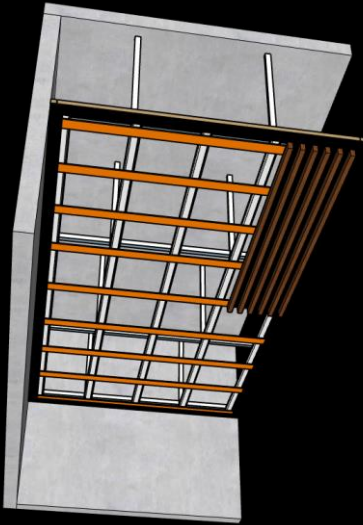

Step 4

Install first panel to dimensions as detailed in the set-out drawing supplied by Decor Acoustics.

The panel is to be screwed to the primary carriers using 4.0 x 30mm CSK screws, with 12-16 screws per panel.

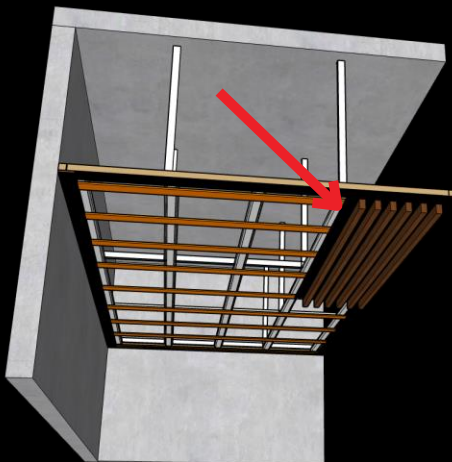

Step 5


Install the first infill carrier.



Steps 6 & 7

Install the second panel, following the same instructions as Step 4.

Install the second infill carrier.

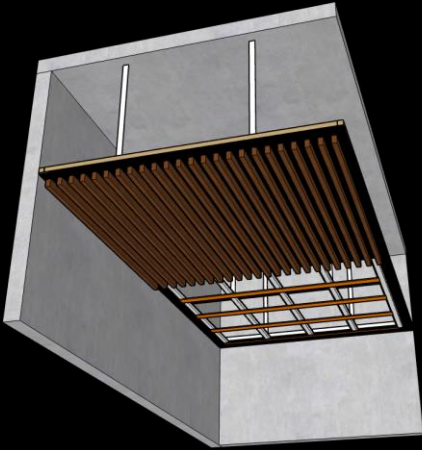


Step 8

Install the final panel in the first row.



Step 9

Install the first panel in the second row to the set-out dimensions detailed in the drawings supplied by Decor Acoustics.

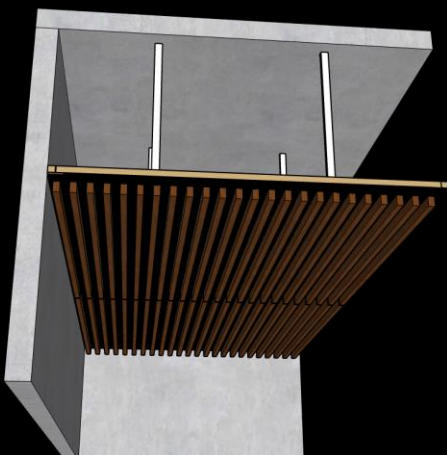

Step 10

Install remaining infill carriers and panels until completion.